First Login TR-1815-LTE Router. (User- admin Password- admin)
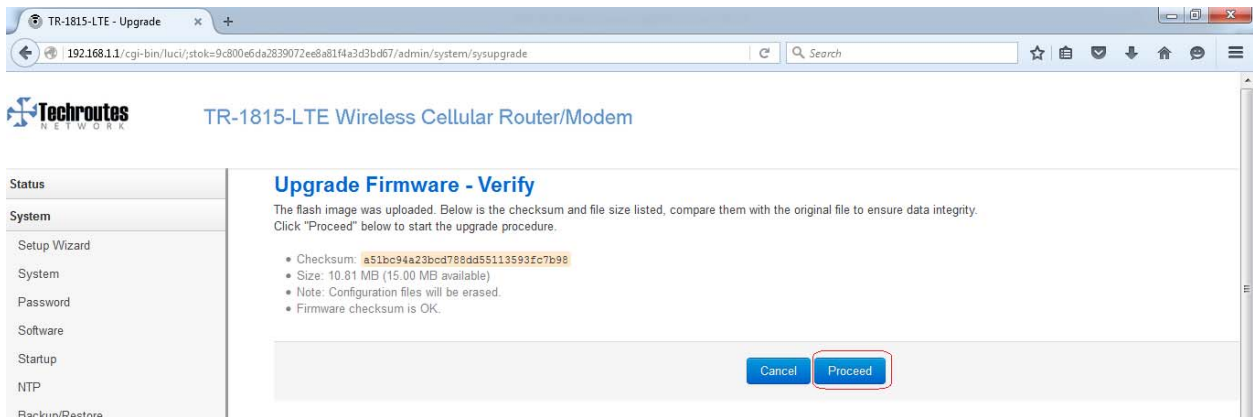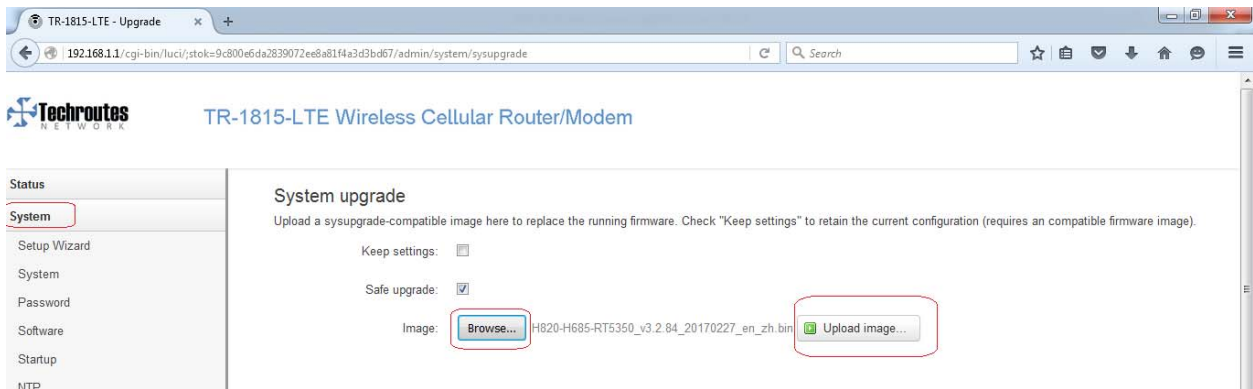//192.168.1.1

Upgrade Firmware

System➔Upgrade

1) Remove Tick from Keep Settings.
2) Click on Browse option for.bin for file selection. (e.g. If you save file in D Drive. LocationSelect D drive path.)
3) Click on Upload Image option.
4) Click on Proceed option and wait for 10 min for system upgrade. **(Note: - Don't Power Off when system upgrade).**
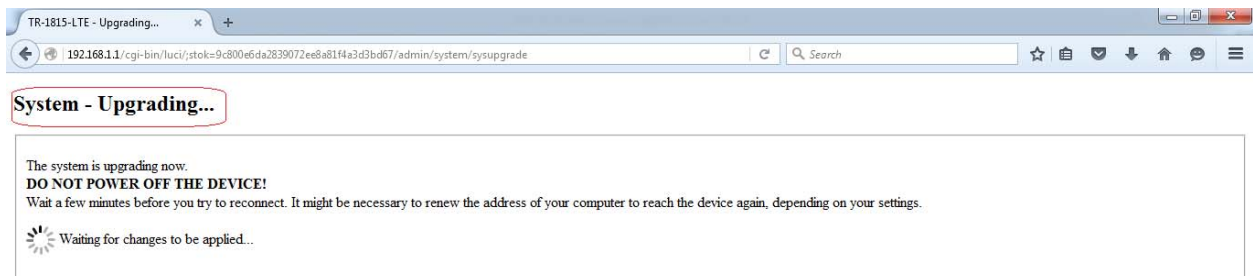
After finish upgrade directly you can see login page.
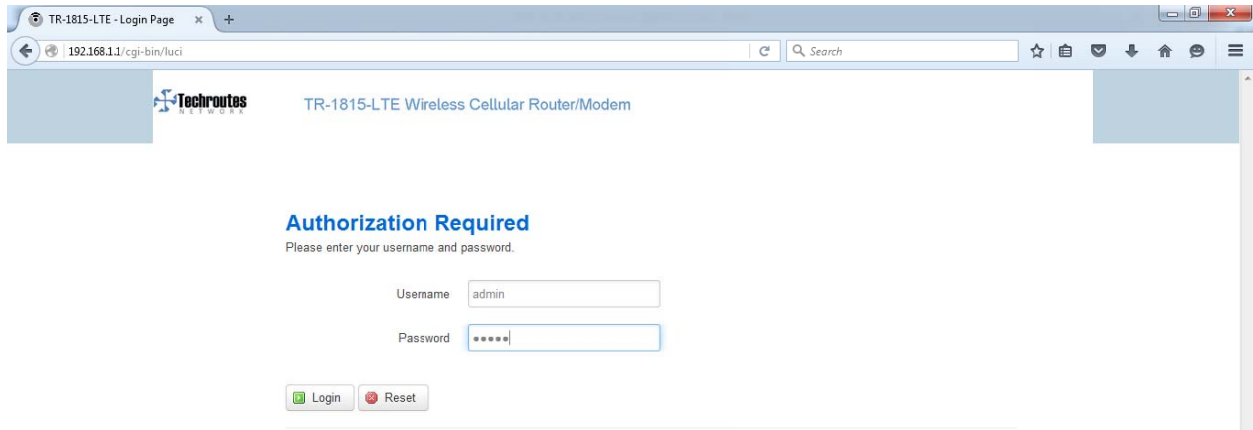
Check & Confirm firmware version

Status→Overview

1) Firmware Version 3.2.100